


Muller HM Data Framescanner



AVT Smartview settings for
Gamma/LUT



LUT / Shdg.

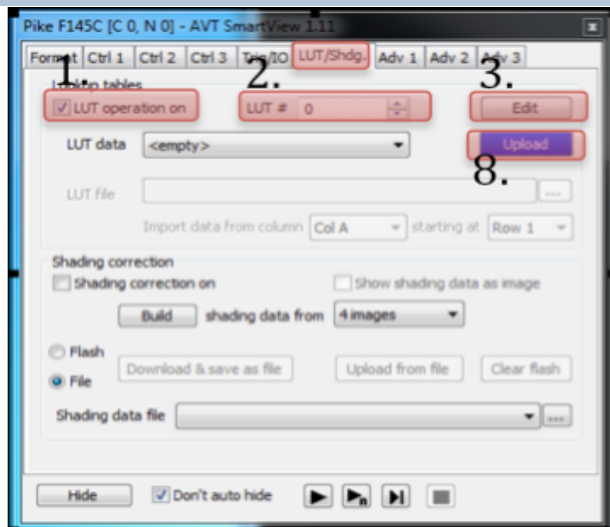

Enter up to 10 or 15 gamma levels in LUT table and upload to the internal register of the PIKE145 camera:

1. Select LUT operation ON
2. Select first LUT register number (for example: 0)
3. Edit
4. Select entire area
5. Choose GAMMA
6. Choose gamma factor (for example: 0,95)
7. Apply
8. Upload to camera

Repeat steps 2, 5, 6, 7 and 8 for all other LUT register numbers.

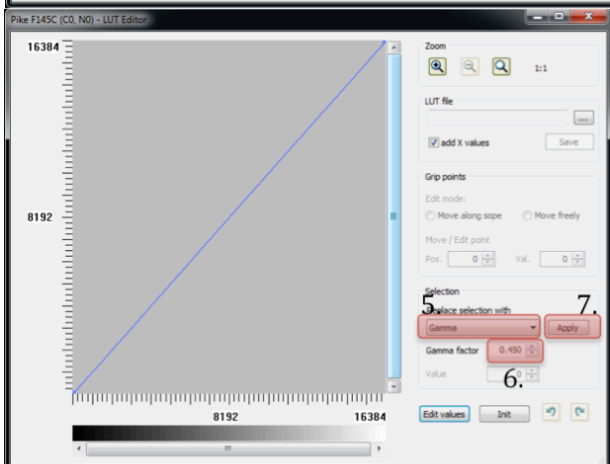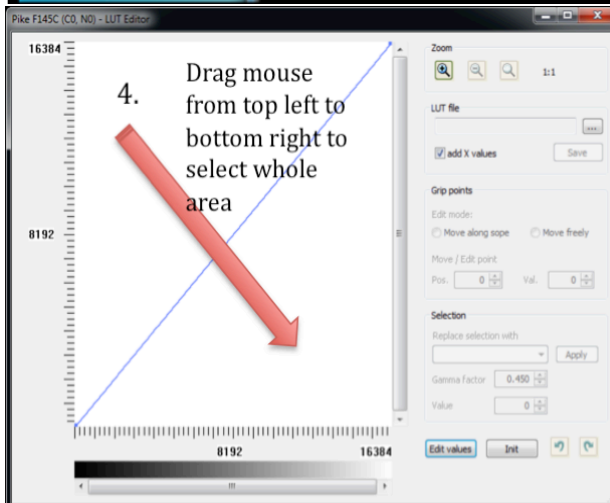

LUT#	Gamma
0	0,95
1	0,90
2	0,85
3	0,80
4	0,75
5	0,70
6	0,65
7	0,60
8	0,55
9	0,50
10	0,45
11	0,40
12	0,35